



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
	MENU
 /  / EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
 /  / SOURCE	 / SOURCE
SAMSUNG TV PLUS	-/--
 / SETTINGS	
TTX / MIX	
VOL+	VOL+
VOL -	VOL -
 / CH+	P+
 / CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
	OK
 /  / RETURN	BACK
 / INFO	INFO
GUIDE	EPG
 / PRE – CH	FAV
NETFLIX	 / NET TV
DISNEY+	 / SMART TUBE

[illegible]