



ORIGINAL	SUPERIOR
STANDBY	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ AV
/ 10+	-/--
DISPLAY	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
SLEEP	SLEEP
TV / RADIO	TV/DTV
TITLE	INFO
FAV / PROGRAM	FAV
ASPECT / SIZE	
RED / GO TO	RED
GREEN / A-B	GREEN

ORIGINAL	SUPERIOR
YELLOW / ANGLE	YELLOW
BLUE / REPEAT	BLUE
I/II / AUDIO	SHIFT+MUTE
D. MENU	SHIFT+MENU
P. MODE	SHIFT+1
S. MODE	SHIFT+2
ZOOM	SHIFT+
D. SETUP	SHIFT+
SUBTITLE	SHIFT+
SKIP PREV. / INDEX	SHIFT+ P-
SKIP NEXT / MIX	SHIFT+ P+
TIMESHIFT	SHIFT+SLEEP
EJECT	SHIFT+
STOP / REVEAL	SHIFT+
REC	SHIFT+RED
REW / TEXT	SHIFT+GREEN
PLAY/PAUSE / HOLD	SHIFT+YELLOW
FWD / SUBPAGE	SHIFT+BLUE

