

A black Superior 4 in 1 remote control. At the top are 'POWER' (red button with a power symbol) and 'MUTE' (button with a speaker and slash symbol). Below these are four buttons: 'TV', 'SAT', 'DVD', and 'AUX', each with a small star icon above it. The next row contains 'MENU', 'EXIT', and 'SHIFT'. A numeric keypad follows, with buttons for digits 1-9, '0', and a '-/=' button. Below the numeric keypad are 'TV/AV', 'PVR', 'SIZE', and 'SETUP' buttons. The center features a large directional pad with 'OK' in the middle, and 'V+' (top-left), 'P+' (top-right), 'V-' (bottom-left), and 'P-' (bottom-right) buttons. Below the directional pad are 'BACK', 'SLEEP', 'TV/DTV', 'INFO', 'EPG', 'FAV', 'NET TV' (red button with a white triangle), 'II' (pause), and 'SMART' buttons. At the bottom are four color-coded buttons: a red button with a dot, a green left arrow, a yellow right arrow, and a blue double right arrow. The brand name 'SUPERIOR' and '4 in 1' are printed at the very bottom.