



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
GO TO	-/--
SUB – T	
TTX	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RECALL	BACK
TV / RADIO	TV/DTV
INFO	INFO
EPG	EPG
FAV	FAV
RED / PVR	RED
GREEN / V – FORMAT	GREEN

[illegible]