



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
USB	-/--
DISPLAY	
SIZE	
MIX	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
	BACK
SLEEP	SLEEP
DTV/RADIO	TV/DTV
INDEX	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV	FAV
ASPECT	/ NET TV
FREEZE	
HOLD	/ SMART
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
MTS	SHIFT+AUDIO
---	SHIFT+1
---	SHIFT+2
---	SHIFT+3
REVEAL	SHIFT+
S.MODE	SHIFT+
P.MODE	SHIFT+
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY/PAUSE	SHIFT+YELLOW
STOP	SHIFT+BLUE

