

ORIGINAL	SUPERIOR
POWER	POWER
SOUND	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
BAND / REPEAT DISC	 / SOURCE
+10	-/--
DISPLAY	
DIMMER	
ANGLE	
FUNCTION	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RETURN	BACK
MEMORY	EPG
DOLBY PRO LOGIC	FAV
OPEN/CLOSE	 / NET TV

ORIGINAL	SUPERIOR
PAUSE	
STOP	 / SMART
TUNING REW	GREEN
PLAY	YELLOW
TUNING FWD	BLUE
AUDIO	SHIFT+MUTE
2.1 CH	SHIFT+1
5.1 CH	SHIFT+2
GO TO	SHIFT+ -/--
ZOOM	SHIFT+ 
SETUP	SHIFT+ 
SUBTITLE	SHIFT+ 
SLOW BACK	SHIFT+LEFT
SLOW FWD	SHIFT+RIGHT
REPEAT A-B/FM MODE	SHIFT+BACK

