



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / SOURCE
-/-- / 10+	-/--
SHIFT	
ASPECT	
MIX	
TEXT/ANGLE	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RECALL	BACK
SLEEP	SLEEP
TV	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
EPG/D. TITLE	EPG
FAV/D. MENU	FAV
AUTO/D. SETUP	 / NET TV
FREEZE	
HOLD	 / SMART
RED/AUDIO	RED
GREEN/GO TO	GREEN
YELLOW/REPEAT	YELLOW
BLUE/A-B	BLUE
NICAM	SHIFT+MUTE
P. MODE	SHIFT+1
S. MODE	SHIFT+2
USB	SHIFT+ 
REVEAL	SHIFT+ 
SIZE	SHIFT+ 
SUBTITLE	SHIFT+ 
SUBPAGE	SHIFT+DOWN
SKIP NEXT/PREV	SHIFT+ P +/-
INDEX	SHIFT+INFO
EJECT	SHIFT+ 
STOP	SHIFT+ 
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

