



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
HDMI CONTROL	-/--
DISPLAY	
LANG	
TEXT	
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RETURN	BACK
SLEEP	SLEEP
INFO	INFO
EPG	EPG
FAV	FAV

ORIGINAL	SUPERIOR
RED/ZOOM/PAGE UP	RED
GREEN/REPEAT/PG. D.	GREEN
YELLOW / ROOT	YELLOW
BLUE / TITLE	BLUE
SWAP	SHIFT+2
	SHIFT+6
SCREEN	SHIFT+
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
SEARCH MODE	SHIFT+INFO
PRESETS	SHIFT+FAV
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

