



ORIGINAL	SUPERIOR	ORIGINAL	SUPERIOR
	POWER		
	MUTE		
MENU	MENU		
EXIT	EXIT		
1/2/3/4/5	1/2/3/4/5		
6/7/8/9/0	6/7/8/9/0		
USB	 / SOURCE		
VOL+	VOL+		
VOL -	VOL -		
UP / +	UP		
DOWN / -	DOWN		
LEFT	LEFT		
RIGHT	RIGHT		
OK	OK		
	BACK		
RADIO	TV/DTV		
INFO	INFO		
S1	SHIFT+1		
S2	SHIFT+2		
S3	SHIFT+3		
S4	SHIFT+4		
S5	SHIFT+5		
S6	SHIFT+6		
S7	SHIFT+7		
S8	SHIFT+8		

