



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
/ SOURCE	/ AV
FOCUS / A-B	-/--
/ MTS	
/ SLEEP	
PIP / REP.	
VOL+	VOL+
VOL-	VOL-
PRG.+	P+
PRG.-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
/ TIME	SLEEP
TV	TV/DTV
INFO	INFO
CTRL.	EPG
SOUND	FAV

ORIGINAL	SUPERIOR
PICTURE	
STILL / SUBT.	
RED / DELETE	RED
GREEN / SKIP	GREEN
YELLOW / INSERT	YELLOW
BLUE / REPLACE	BLUE
SIZE / AUDIO	SHIFT+MUTE
CVBS 1	SHIFT+1
CVBS 2	SHIFT+2
CVBS 3	SHIFT+3
Y.Pb.Pr.	SHIFT+4
YC 1	SHIFT+5
YC 2	SHIFT+6
PC	SHIFT+7
DVI	SHIFT+8
/ PREPG.	SHIFT+
NORMAL / TITLE	SHIFT+INFO

