



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
SYS MENU	MENU
EXIT / CANCEL	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
MODE	 / SOURCE
-/--	-/--
DISPLAY	
SIZE	
TXT / MIX	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
BACK / RETURN	BACK
SLEEP	SLEEP
DTV / RADIO	TV/DTV
INFO / LANGUAGE	INFO
EPG / SLOW	EPG

ORIGINAL	SUPERIOR
FAV / SEARCH	FAV
HOLD	 / SMART
RED / ANGLE	RED
GREEN / PROGRAM	GREEN
YELLOW / REPEAT	YELLOW
BLUE / A - B	BLUE
NICAM / A2	SHIFT+MUTE
DVD MENU	SHIFT+MENU
REVEAL	SHIFT+ 
ZOOM / LIST	SHIFT+ 
SETUP	SHIFT+ 
SUBTITLE	SHIFT+ 
FAV-	SHIFT+LEFT
FAV+	SHIFT+RIGHT
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
TITLE / SUBPAGE	SHIFT+INFO
INDEX	SHIFT+EPG
EJECT	SHIFT+ 
STOP	SHIFT+ 
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

