



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
USB	/ AV
MOUSE	-/--
DISPLAY	
FIND	
MODE	
TXT	
VOL+	VOL+
VOL-	VOL-
PAGE+	P+
PAGE-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
TIMER	SLEEP
TV / R.	TV/DTV
HELP	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV	FAV
RED / AUDIO	RED
GREEN / PAUSE	GREEN
YELLOW / ZOOM	YELLOW
BLUE / INFO	BLUE
	SHIFT+1
SAT	SHIFT+7
SUB.	SHIFT+
F1	SHIFT+FAV
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

