



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT/DVD SETUP	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	/ SOURCE
LIST	-/--
REVEAL	
SIZE	
MIX	
TEXT/ZOOM	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
S	SLEEP
TV.RD/ANGLE	TV/DTV
i	INFO

ORIGINAL	SUPERIOR
GUIDE	EPG
FAV/MENU	FAV
ASPECT	/ NET TV
HOLD	/ SMART VIDEO
RED / PROG	RED
GREEN / STEP	GREEN
YELLOW / GOTO	YELLOW
BLUE / A - B	BLUE
AUDIO	SHIFT+MUTE
INDEX	SHIFT+MENU
CANCEL	SHIFT+EXIT
SKIP NEXT	SHIFT+ P +
SKIP PREV	SHIFT+ P -
/ REPEAT	SHIFT+BACK
SLOW	SHIFT+SLEEP
TITLE	SHIFT+INFO
S.PAGE	SHIFT+EPG
EJECT	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY/PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

