



ORIGINAL	SUPEIOR
	POWER
	MUTE
MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV	/ SOURCE
	-/--
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
TV / EXIT	TV/DTV
i	INFO
GUIDE	EPG
FAV	FAV

ORIGINAL	SUPERIOR
	/ NET TV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
	SHIFT+EXIT
PIP	SHIFT+1
SWAP	SHIFT+2
PIP POS	SHIFT+3
	SHIFT+
PIP SIZE	SHIFT+
SUBTITLE	SHIFT+
	SHIFT+

