



We are sorry,
PICTURE
NOT
AVAILABLE

ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DISC	 / SOURCE
CD COPY	-/--
DISPLAY	
BASS BOOST	
POWER SOUND	
SOUND MODE	
VOL+	VOL+
VOL -	VOL -
PRESET NEXT	P+
PRESET PREV	P -
TUNING+	UP
TUNING -	DOWN
PREV TRACK	LEFT
NEXT TRACK	RIGHT
SLEEP	SLEEP
MODE	TV/DTV
MEMORY	EPG
PAUSE	
STOP	 / SMART
REC	RED

[illegible]