



ORIGINAL	SUPERIOR
POWER	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
HDD	/ AV
GAME	-/--
PVR	
MEDIA	
SLOW	
TXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RCL	BACK
	SLEEP
INFO	INFO
EPG	EPG

ORIGINAL	SUPERIOR
FAV	FAV
RED / SAT	RED
GREEN / ..	GREEN
YELLOW / PAUSE	YELLOW
BLUE / TV/RADIO	BLUE
AUDIO	SHIFT+MUTE
SUBTL.	SHIFT+
▲ / T – SHIFT	SHIFT+UP
▼ / V – FORMAT	SHIFT+DOWN
SKIP NEXT	SHIFT+ P+
SKIP PREV.	SHIFT+ P -
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

