



ORIGINAL	SUPERIOR
ON	POWER
MUTE	MUTE
BYPASS	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
>10	-/--
BASS	
TREBLE	
SETUP	
BAL	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT / TUNE+	P+
SKIP PREV / TUNE -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENT	OK
DIM	INFO
RANDOM	FAV
PAUSE	
STOP	/ SMART
REW / PRESET -	GREEN

ORIGINAL	SUPERIOR
PLAY	YELLOW
FWD / PRESET+	BLUE
OFF	SHIFT+POWER
USB	SHIFT+1
TUNER	SHIFT+2
PHONO	SHIFT+3
CD	SHIFT+4
D 1	SHIFT+5
D 2	SHIFT+6
AUX 1	SHIFT+7
AUX 2	SHIFT+8

