



ORIGINAL	SUPERIOR
ON	POWER
MUTE	MUTE
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
BYPASS	-/--
BASS	
TREB	
SETUP	
BAL	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT/TUNE+	P+
SKIP PREV/TUNE -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENT	OK
RPT	BACK
RDN	TV/DTV
DIM	INFO
PAUSE	
STOP	/ SMART
REW/PRESET -	GREEN
PLAY	YELLOW

ORIGINAL	SUPERIOR
FWD/PRESET+	BLUE
OFF	SHIFT+POWER
AUX	SHIFT+1
BT	SHIFT+2
CD	SHIFT+3
COAX 1	SHIFT+4
COAX 2	SHIFT+5
OPT 1	SHIFT+6
OPT 2	SHIFT+7
PC – USB	SHIFT+8
PHONO	SHIFT+9
TUNER	SHIFT+0
USB	SHIFT+
XLR	SHIFT+ -/--
SPEAKERS A	SHIFT+LEFT
SPEAKERS B	SHIFT+RIGHT

