



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV	 / SOURCE
SP / LP	-/--
SHOW VIEW	
TAPE	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
TV VIDEO	TV/DTV
INFO	INFO
PAUSE	
STOP	 / SMART
REC	RED
REW	GREEN

[illegible]