



ORIGINAL	SUPERIOR
POWER	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
/ SOURCE	/ SOURCE
LIST	-/--
TEXT	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
	BACK
SLEEP	SLEEP
DVB	TV/DTV
/ INFO	INFO
EPG	EPG
	FAV

ORIGINAL	SUPERIOR
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO / / I/II	SHIFT+MUTE
	SHIFT+EXIT
USB	SHIFT+
/	SHIFT+
/ SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P-
RADIO	SHIFT+ TV/DTV
INDEX	SHIFT+INFO
STILL / STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

