



ORIGINAL	SUPERIOR
STANDBY	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	/ AV
-/--	-/--
DISPLAY	
ASPECT	
SUBTITLE	
TEXT	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
	BACK
SLEEP	SLEEP
TV / RADIO	TV/DTV
MEDIA	INFO

ORIGINAL	SUPERIOR
GUIDE	EPG
PREF.	FAV
AUTO	
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
CH. LIST	SHIFT+ -/--
P. MODE	SHIFT+
S. MODE	SHIFT+
PREF.-	SHIFT+DOWN
PREF.+	SHIFT+UP
SKIP PREV.	SHIFT+ P-
SKIP NEXT	SHIFT+ P+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

