



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TV/AV	/ SOURCE
SHIFT	-/--
ZOOM	
VOL+	VOL+
VOL -	VOL -
PR+	P+
PR -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK / LIST	OK
← PR	BACK
SLEEP	SLEEP
TV/RADIO	TV/DTV
INFO	INFO
EPG	EPG
FAV	FAV
RED / FIND	RED

ORIGINAL	SUPERIOR
GREEN / V – FORMAT	GREEN
YELLOW / TXT	YELLOW
BLUE / 	BLUE
F1	SHIFT+1
F2	SHIFT+2
SAT	SHIFT+7
	SHIFT+UP
	SHIFT+DOWN
SLOW REW	SHIFT+LEFT
SLOW FWD	SHIFT+RIGHT
PAUSE	SHIFT+
STOP	SHIFT+
RECORD	SHIFT+RED
FAST REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FAST FWD	SHIFT+BLUE

