



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9	6/7/8/9
0 / ZOOM /	0
TV / SAT	/ SOURCE
WHITE	-/--
V. FORMAT	
Tms	
F1	
TTX	
VOL+	VOL+
VOL -	VOL -
PAGE UP	P+
PAGE DOWN	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
/ RECALL	BACK
	SLEEP
/ USB	TV/DTV

ORIGINAL	SUPERIOR
INFO	INFO
EPG	EPG
FAV	FAV
RED / AUDIO	RED
GREEN / OPTION	GREEN
YELLOW	YELLOW
BLUE	BLUE
/ FIND	SHIFT+EXIT
/ FOLDER	SHIFT+1
SAT	SHIFT+7
BACK/ / PLAYMODE	SHIFT+DISPLAY
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
STEP BACK	SHIFT+LEFT
STEP FWD	SHIFT+RIGHT
TV / RADIO	SHIFT+TV/DTV
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW / PAGE-	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD / PAGE+	SHIFT+BLUE

