



ORIGINAL	SUPERIOR
	POWER
	MUTE
HOME MENU	MENU
EXIT / x	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
MEDIA CENTER	/ AV
REC LIST	-/--
DISPLAY DISC	
/ FORMAT	
OPTION	
/ TEXT	
VOL+	VOL+
VOL-	VOL-
P+	P+
P-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
/ RETURN	BACK
REC TIMER	SLEEP
/ RADIO	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
GUIDE	EPG
CANAL PLAY	FAV
RED / A	RED
GREEN / B	GREEN
YELLOW / C	YELLOW
BLUE / D	BLUE
/ AUDIO	SHIFT+MUTE
POP-UP MENU	SHIFT+MENU
/ SUB.	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV.	SHIFT+ P-
D))) / AUDIO	SHIFT+FAV
OPEN / CLOSE	SHIFT+
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

