



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
M / MENU	MENU
X / EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SWAP	/ SOURCE
V – FORMAT	-/--
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
TIMER	SLEEP
AD	TV/DTV
i	INFO
	EPG
	FAV

ORIGINAL	SUPERIOR
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
?	SHIFT+MUTE
MEDIA	SHIFT+6
	SHIFT+
SKIP NEXT	SHIFT+P+
SKIP PREV	SHIFT+P -
	SHIFT+UP
	SHIFT+DOWN
	SHIFT+TV/DTV
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

