



ORIGINAL	SUPERIOR
	POWER
X	MUTE
M / MENU	MENU
X / EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
	/ SOURCE
	-/--
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
/ BACK	BACK
/ RADIO	TV/DTV
i / INFO	INFO
/ GUIDE	EPG
RED / A	RED
GREEN / B	GREEN

ORIGINAL	SUPERIOR
YELLOW / C	YELLOW
BLUE / D	BLUE
?	SHIFT+MUTE
/ MEDIA	SHIFT+6
/ DVD	SHIFT+
	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

