



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / SOURCE
-/--	-/--
DISPLAY	
ASPECT	
SUBTITLE	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
	BACK
SLEEP	SLEEP
DTV	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV	FAV
AUTO	 / NET TV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
CYAN	BLUE
AUDIO	SHIFT+MUTE
MEDIA	SHIFT+MENU
NICAM / A2	SHIFT+1
P. MODE	SHIFT+ 
S. MODE	SHIFT+ 
SKIP NEXT / SUBPAGE	SHIFT+ P+
SKIP PREV / REVEAL	SHIFT+ P -
T. SHIFT	SHIFT+SLEEP
TV / RADIO	SHIFT+ TV/DTV
INDEX	SHIFT+INFO
STOP	SHIFT+ 
REC / REPEAT	SHIFT+RED
REW / HOLD	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD / SIZE	SHIFT+BLUE

