



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
/ SHORTCUT	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9	6/7/8/9
0 / ZOOM /	0
/ USB	/ SOURCE
WHITE / REPEAT	-/--
V. FORMAT	
F1	
TTX	
VOL+	VOL+
VOL -	VOL -
PAGE+	P+
PAGE -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
/ RECALL	BACK
	SLEEP
TV / RADIO	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV	FAV
GO TO	/ NET TV
RED / AUDIO	RED
GREEN / OPTION	GREEN
YELLOW	YELLOW
BLUE / BOOKMARK	BLUE
MENU	SHIFT+MENU
/ FIND	SHIFT+EXIT
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
A - B	SHIFT+BACK
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
F.B.	SHIFT+GREEN
PLAY	SHIFT+YELLOW
F.F.	SHIFT+BLUE

