



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SAT	/ SOURCE
PVR LIST	-/--
MP3	
GO TO	
EDIT	
TXT	
VL.+	VOL+
VL. -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RCL.	BACK
SLEEP	SLEEP
INFO	INFO
EPG	EPG

ORIGINAL	SUPERIOR
FAV	FAV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
T. S.	SHIFT+2
USB	SHIFT+
JPEG	SHIFT+ -/--
ZOOM	SHIFT+
SUB.	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
PG. DN.	SHIFT+DOWN
PG. UP	SHIFT+UP
A - B	SHIFT+BACK
TV / R	SHIFT+ TV/DTV
	SHIFT+INFO
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

