



ORIGINAL	SUPERIOR
DVD STANDBY/ON	POWER
AUDIO	MUTE
/ MENU	MENU
CANCEL	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	/ AV
TITLE LIST / DISC MENU	-/--
SHOW VIEW	
CM SKIP	
PLAY LIST / TITLE MENU	
SUBTITLE	
TV VOL+	VOL+
TV VOL-	VOL-
SKIP NEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
/ OK	OK
/ RETURN	BACK
TIME SLIP	SLEEP
TV / DVD	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
ANYKEY	EPG
MARKER	FAV
OPEN / CLOSE	
STOP	
REC	RED
REW	GREEN
PLAY / PUASE	YELLOW
FWD	BLUE
PIP	SHIFT+1
PROG+	SHIFT+ P+
PROG-	SHIFT+ P-
	SHIFT+LEFT
	SHIFT+RIGHT
REPEAT	SHIFT+BACK
REPEAT A – B	SHIFT+SLEEP
REC PAUSE	SHIFT+
REC MODE	SHIFT+RED

