



ORIGINAL	REPLACEMENT
POWER	POWER
MUTE	MUTE
[TV] / MENU	MENU
CANCEL	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
V-SOUND / V-H/P	AV
SD / HD	-/--
SLIDE MODE	[Slide Mode Icon]
ZOOM	[Zoom Icon]
EZ. VIEW / NT./PAL	[EZ View Icon]
SUBTITLE	[Subtitle Icon]
VOLUME+	VOL+
VOLUME-	VOL-
SKIP NEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
[Return Icon] / RETURN	BACK
SLEEP	SLEEP
DIGEST	TV/DTV
INFO	INFO

ORIGINAL	REPLACEMENT
TUNER MEMORY	EPG
LOGO	FAV
EJECT	[Eject Icon]
PAUSE	[Pause Icon]
STOP	[Stop Icon]
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
AUX	SHIFT+1
DVD	SHIFT+2
TUNER	SHIFT+3
USB	SHIFT+4
MO. / ST.	SHIFT+ -/--
TUNING/CH -	SHIFT+ P-
TUNING/CH +	SHIFT+ P+
HDMI AUDIO / SELECT	SHIFT+OK
REPEAT	SHIFT+BACK
STEP	SHIFT+SLEEP
DIMMER	SHIFT+INFO
REMAIN	SHIFT+ [Pause Icon]

