



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
 / MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOUND EDIT	 / SOURCE
SLOW / MO/ST	-/--
DSP / EQ.	
ZOOM	
SLIDE MODE	
SUBTITLE	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
 / ENTER	OK
 / RETURN	BACK
SLEEP	SLEEP
DOLBY PL. MODE	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
TUNER MEM. / SD/HD	EPG
DOLBY PL. EFFECT	FAV
OPEN / CLOSE	 / NET TV
PAUSE	
STOP	 / SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
CANCEL	SHIFT+EXIT
AUX	SHIFT+1
DVD	SHIFT+2
TUNER	SHIFT+3
USB	SHIFT+4
EZ. VIEW / NT/PAL.	SHIFT+ 
LOGO	SHIFT+ 
TEST TONE	SHIFT+ 
DISC SKIP	SHIFT+RIGHT
TUNING / CH+	SHIFT+ P+
TUNING / CH -	SHIFT+ P -
REPEAT	SHIFT+BACK
STEP	SHIFT+SLEEP
DIMMER	SHIFT+INFO
DIGEST	SHIFT+EPG
REMAIN	SHIFT+ 

