



ORIGINAL	REPLACEMENT
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1 / RDS DISPLAY	1
2	2
3 / TA	3
4 / PTY-	4
5 / PTY SEARCH	5
6 / PTY+	6
7/8/9/0	7/8/9/0
DOLBY PL. II MODE	AV
MO/ST / SLOW	-/--
LOGO	
ZOOM	
SOUND EDIT	
SUB TITLE	
VOLUME -/+	VOL -/+
SKIP PREV./NEXT	P -/+
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
/ RETURN	RETURN

ORIGINAL	REPLACEMENT
SLEEP	SLEEP
TV / VIDEO	TV/DTV
INFO	INFO
SD/HD / TUNER MEM.	EPG
P. BASS	FAV
OPEN / CLOSE	
PAUSE	
STOP	
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
CANCEL	SHIFT+EXIT
DVD	SHIFT+1
TUNER	SHIFT+2
PORT	SHIFT+3
AUX	SHIFT+4
DOLBY PL. II EFFECT	SHIFT+AV
DSP / EQ.	SHIFT+
TUNING/CH -	SHIFT+ P-
TUNING/CH +	SHIFT+ P+
REPEAT	SHIFT+BACK
STEP	SHIFT+SLEEP
DIMMER	SHIFT+INFO
REMAIN	SHIFT+

