



ORIGINAL	SUPERIOR
	POWER
	MUTE
/ MENU	MENU
/ EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
CD RIPPING	/ AV
REMAIN	-/--
DIMMER	
ZOOM	
SLOW	
SUBTITLE	
VOL+	VOL+
VOL-	VOL-
SKIP NEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
/ ENTER	OK
/ RETURN	BACK
SLEEP	SLEEP
SD / HD	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
SOUND EDIT	EPG
LOGO	FAV
EJECT	
PAUSE	
STOP	
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
CANCEL	SHIFT+EXIT
DVD	SHIFT+1
TUNER	SHIFT+2
PORT	SHIFT+3
AUX	SHIFT+4
V-H/P / V – SOUND	SHIFT+
MO / ST	SHIFT+
P. BASS	SHIFT+
TUNING / CH+	SHIFT+ P+
TUNING / CH-	SHIFT+ P-
REPEAT	SHIFT+BACK
STEP	SHIFT+SLEEP
TUNER MANUAL	SHIFT+INFO
TUNER MEMORY	SHIFT+EPG
TUNER PRESET	SHIFT+FAV

