



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
/ MENU	MENU
EXIT	EXIT
1 / RDS DISPLAY	1
2	2
3 / TA	3
4 / PTY-	4
5 / PTY SEARCH	5
6 / PTY+	6
7/8/9/0	7/8/9/0
DEMO	AV
MO. / ST.	-/--
DSP. / EQ.	
ZOOM	
ANGLE	
SUBTITLE	
VOL -/+	VOL -/+
SKIP PREV./NEXT	P -/+
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
/ ENTER	OK
/ RETURN	BACK

ORIGINAL	SUPERIOR
SLEEP	SLEEP
CD RIPPING	TV/DTV
i / INFO	INFO
TUNER MEMORY	EPG
P. SOUND	FAV
EJECT	
PAUSE	
STOP	
REW	GREEN
PLAY	YELLOW
FWD	BLUE
TIMER – ON/OFF	SHIFT+POWER
AUDIO	SHIFT+MUTE
Ø / CANCEL	SHIFT+EXIT
AUX / DVD	SHIFT+ 1/2
TUNER / USB	SHIFT+ 3/4
TREB. / BASS	SHIFT+ -/--
TUNING DOWN/UP	SHIFT+ P-/+
REPEAT A-B	SHIFT+LEFT
REPEAT	SHIFT+BACK
TIMER / CLOCK	SHIFT+SLEEP
DIMMER	SHIFT+INFO
REMAIN	SHIFT+
SLOW	SHIFT+GREEN
STEP	SHIFT+YELLOW

