



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
/ MENU	MENU
/ EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
/ FUNC. / TV SOURCE	/ SOURCE
DISC MENU	-/--
FULL SCREEN	
SFE MODE	
POPOP / TITLE MENU	
/ TOOLS	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
	OK
/ RETURN	BACK
SLEEP	SLEEP
DSP	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
INTERNET @	EPG
EJECT	/ NET TV
PAUSE	/ SMART TUBE
STOP	/ SMART VIDEO
REW	GREEN
PLAY	YELLOW
FWD	BLUE
V - SOUND	SHIFT+MUTE
TUNING / CH+	SHIFT+ P+
TUNING / CH -	SHIFT+ P -
REPEAT	SHIFT+BACK
RED / A	SHIFT+RED
GREEN / B	SHIFT+GREEN
YELLOW / C / TUN. MEM.	SHIFT+YELLOW
BLUE / D / MO/ST	SHIFT+BLUE

