

ORIGINAL	SUPERIOR
STANDBY / ON	POWER
AUDIO	MUTE
 / MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
 / SOURCE	 / SOURCE
TV / RADIO	-/--
TIT. LIST / DISC MENU	
REC MODE	
TEXT	
SKIP NEXT	VOL+
SKIP PREV	VOL -
PROG+	P+
PROG -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
 / OK	OK
 / RETURN	BACK
TIMER	SLEEP
DTV / ANALOG	TV/DTV
i / INFO	INFO
GUIDE	EPG

ORIGINAL	SUPERIOR
FAV LIST	FAV
OPEN / CLOSE	 / NET TV
PAUSE	
STOP	 / SMART
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
PLAY LIST / TIT. MENU	SHIFT+MENU
SUBTITLE	SHIFT+ 
SELECT – USB	SHIFT+LEFT
SELECT – DVD	SHIFT+UP
SELECT – HDD	SHIFT+RIGHT
REPEAT	SHIFT+BACK
TV / DVD	SHIFT+ TV/DTV
MARKER	SHIFT+INFO
COPY	SHIFT+FAV
REC PAUSE / TIME SH.	SHIFT+ 
RED / A	SHIFT+RED
GREEN / B	SHIFT+GREEN
YELLOW / C	SHIFT+YELLOW
BLUE / D	SHIFT+BLUE

ORIGINAL	SUPERIOR
TV	
TV STANDBY/ON	SHIFT+POW
TV MUTE	SHIFT+MUT
1/2/3/4/5	SHIFT+ 1/2/3/
6/7/8/9/0	SHIFT+ 6/7/8/
 / SOURCE	SHIFT+ [
TV VOL+	SHIFT+ VOI
TV VOL -	SHIFT+ VOI
PROG+	SHIFT+ P+
PROG -	SHIFT+ P-

