



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
□□□ / SETUP / MENU	MENU
1 / CD	1
2 / VCR	2
3 / DVD	3
4 / 5.1 CH.	4
5 / SAT	5
6 / AUX	6
7/8/9/0	7/8/9/0
FUNCTION	☐ / SOURCE
TUNER	-/--
DISPLAY	☐
SFE. MODE	☐
MO. / ST.	☐
TEST TONE	☐
VOLUME+	VOL+
VOLUME -	VOL -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
SLEEP	SLEEP
TA	TV/DTV

ORIGINAL	SUPERIOR
INFO	INFO
PL. II EFFECT	EPG
PL. II MODE	FAV
SPK. LEVEL	RED
SPK. SELECT	GREEN
STEREO	YELLOW
SUB WOOFER	BLUE
INPUT MODE	SHIFT+ ☐
ES. / EX.	SHIFT+ -/--
RDS DISPLAY	SHIFT+ ☐
PTY -	SHIFT+LEFT
PTY+	SHIFT+RIGHT
PTY SEARCH	SHIFT+OK
NEO:6 MODE	SHIFT+ TV/DTV
DRC	SHIFT+INFO
TUNER MEMORY	SHIFT+EPG
TUNING MODE	SHIFT+FAV

