


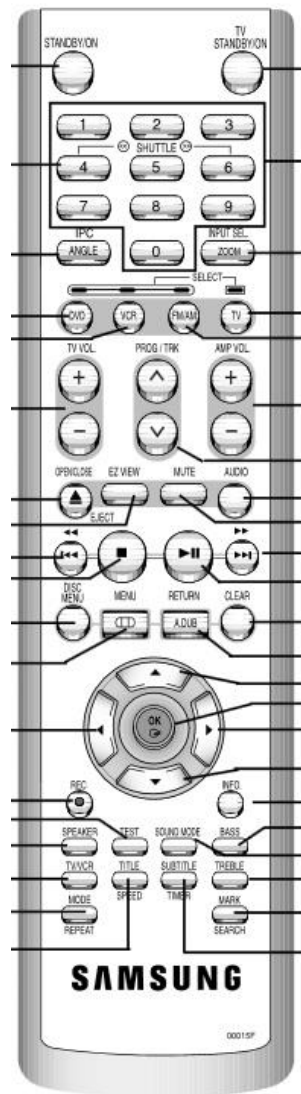

ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT DVD	AV
GREATER 100	-/--
NOT USED	
ZOOM	
MODE	
SUBTITLE	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RETURN	BACK
NOT USED	SLEEP
TV/VCR	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
MODE	EPG
ANGLE	FAV
OPEN/CLOSE	
PAUSE	
STOP	
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
SETUP	SHIFT+
AUDIO	SHIFT+MUTE
INPUT LINE+	SHIFT+1
INPUT VCR	SHIFT+AV
RADIO	SHIFT+TV/DTV
REPEAT	SHIFT+BACK

