



ORIGINAL	SUPERIOR
POWER	POWER
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT NEXT	 / SOURCE
TITL. LIST/DISC MENU	-/--
COPY TO DVD	
ZOOM	
ANGLE	
SUBTITLE	
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
TV/VCR	TV/DTV
INFO	INFO
TITLE MENU/PLAYLIST	EPG
BOOKMARK	FAV
EJECT	 / NET TV
PAUSE	

ORIGINAL	SUPERIOR
STOP	 / SMART
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
DVD	SHIFT+1
VCR	SHIFT+2
>100	SHIFT+ -/--
COPY TO VCR	SHIFT+ 
SKIP	SHIFT+RIGHT
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
REPEAT/MODE	SHIFT+BACK
REC TIMER	SHIFT+SLEEP
ANY KEY	SHIFT+INFO
REC PAUSE	SHIFT+ 
REC SPEED	SHIFT+BLUE

