



ORIGINAL	SUPERIOR
STANDBY / ON	POWER
AUDIO / TV MUTE	MUTE
[Three vertical bars] / MENU	MENU
Ø / CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SELECT – DVD	AV
SELECT – VCR	-/--
IPC	[TV icon]
ANYKEY	[TV icon]
PIP	[TV icon]
SUBTITLE	[TV icon]
SKIP NEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
[Circular arrow] / RETURN	BACK
TIMER REC.	SLEEP
TV / VCR	TV/DTV
INFO	INFO
PLAY LIST / TITLE ME.	EPG
MARKER	FAV

ORIGINAL	SUPERIOR
OPEN / CLOSE	[Up arrow]
REC PAUSE	[Pause]
STOP	[Stop]
REC.	RED
REW	GREEN
PLAY / PAUSE	YELLOW
FWD	BLUE
INPUT SELECT	SHIFT+AV
PROG./TRK. -	SHIFT+DOWN
PROG./TRK. +	SHIFT+UP
LEFT / COPY DVD	SHIFT+LEFT
RIGHT / COPY VCR	SHIFT+RIGHT
TIME SLIP	SHIFT+SLEEP
TITLE LIST / DISC ME.	SHIFT+INFO
REC. SPEED	SHIFT+RED
F. ADV. / SKIP	SHIFT+BLUE
TV	
TV STANDBY/ON	SHIFT+POWER
AUDIO / TV MUTE	SHIFT+MUTE
1/2/3/4/5	SHIFT+1/2/3/4/5
6/7/8/9/0	SHIFT+6/7/8/9/0
PROG./TRK. -	SHIFT+ P-
PROG./TRK. +	SHIFT+ P+
VOL -/+	SHIFT+ VOL-/+

