



ORIGINAL	SUPERIOR
STANDBY / ON	POWER
□□□ / MENU	MENU
Ø / CANCEL	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT SEL. / TV/RAD.	📺 / SOURCE
DISC MENU / TIT. LIST	-/--
COPY	📋
ANY KEY	📋
SKIP NEXT	P+
SKIP PREV	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
↺ / RETURN	BACK
TIMER	SLEEP
TV / DVD	TV/DTV
INFO	INFO
EPG	EPG
FAV	FAV
OPEN / CLOSE	⬆️ / NET TV
PAUSE	⏸️
STOP	⏹️ / SMART

ORIGINAL	SUPERIOR
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
TIT. MENU / PLAY LIST	SHIFT+MENU
DTT	SHIFT+1
DVD	SHIFT+2
HDD	SHIFT+3
PROG+	SHIFT+ P+
PROG -	SHIFT+ P -
REPEAT	SHIFT+BACK
REC. MODE	SHIFT+FAV
REC. PAUSE	SHIFT+ ⏸️
RED / i	SHIFT+RED
GREEN / SUBT. / TEXT	SHIFT+GREEN
YELLOW / ALT	SHIFT+YELLOW
BLUE / AUDIO	SHIFT+BLUE

