



ORIGINAL	SUPERIOR
STB POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
USB	/ SOURCE
LISTA	-/--
((ONLINE PLAY	
PRE - CH	
OPZIONI	
TXT	
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
RADIO	TV/DTV
INFO	INFO
GUIDA TV	EPG
APP	FAV
RED	RED

ORIGINAL	SUPERIOR
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
☆ 1	SHIFT+1
☆ 2	SHIFT+2
☆ 3	SHIFT+3
SUB	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
INFO	SHIFT+INFO
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

