



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
[Icon] / MENU	MENU
[Icon] / EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
REMAIN	-/--
DSP EQ	[Icon]
ZOOM	[Icon]
CD RIPPING	[Icon]
SUBTITLE	[Icon]
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
[Icon] / ENTER	OK
[Icon] / RETURN	BACK
STEP	SLEEP
MO / ST	TV/DTV
INFO	INFO
TUNER MEMORY	EPG

ORIGINAL	SUPERIOR
LOGO	FAV
EJECT	[Icon] / NET TV
PAUSE	[Icon] / SMART TUBE
STOP	[Icon] / SMART VIDEO
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
AUX	SHIFT+1
DVD	SHIFT+2
PORT	SHIFT+3
TUNER	SHIFT+4
SOUND EDIT	SHIFT+ [Icon]
PLII MODE	SHIFT+ [Icon]
PLII EFFECT	SHIFT+ [Icon]
TUNING / CH+	SHIFT+ P+
TUNING / CH -	SHIFT+ P -
REPEAT	SHIFT+BACK
SLOW	SHIFT+SLEEP
P. BASS	SHIFT+TV/DTV
DIMMER	SHIFT+INFO

