



| ORIGINAL        | SUPERIOR     |
|-----------------|--------------|
| POWER           | POWER        |
| MUTE            | MUTE         |
| / MENU          | MENU         |
| EXIT            | EXIT         |
| 1 / RDS DISPLAY | 1            |
| 2               | 2            |
| 3 / TA          | 3            |
| 4 / PTY-        | 4            |
| 5 / PTY SEARCH  | 5            |
| 6 / PTY+        | 6            |
| 7/8/9/0         | 7/8/9/0      |
| BD              | / AV         |
| TUNER           | -/--         |
| DSP.            |              |
| ZOOM            |              |
| V-SOUND         |              |
| SUBTITLE        |              |
| VOL -/+         | VOL -/+      |
| SKIP PREV./NEXT | P -/+        |
| DOWN / UP       | DOWN / UP    |
| LEFT / RIGHT    | LEFT / RIGHT |
| / ENTER         | OK           |
| / RETURN        | BACK         |
| SLEEP           | SLEEP        |
| MO. / ST.       | TV/DTV       |

| ORIGINAL         | SUPERIOR     |
|------------------|--------------|
| i / INFO         | INFO         |
| TITLE/POPUP MENU | EPG          |
| DIMMER           | FAV          |
| EJECT            |              |
| PAUSE            |              |
| STOP             |              |
| REW              | GREEN        |
| PLAY             | YELLOW       |
| FWD              | BLUE         |
| AUDIO            | SHIFT+MUTE   |
| DISC MENU        | SHIFT+MENU   |
| Ø / CANCEL       | SHIFT+EXIT   |
| PIP              | SHIFT+1      |
| AUX              | SHIFT+AV     |
| TUNING/CH DOWN   | SHIFT+ P-    |
| TUNING/CH UP     | SHIFT+ P+    |
| SLOW             | SHIFT+LEFT   |
| REPEAT           | SHIFT+BACK   |
| REPEAT A-B       | SHIFT+SLEEP  |
| TUNER MEMORY     | SHIFT+EPG    |
| STEP             | SHIFT+       |
| RED / A          | SHIFT+RED    |
| GREEN / B        | SHIFT+GREEN  |
| YELLOW / C       | SHIFT+YELLOW |
| BLUE / D         | SHIFT+BLUE   |

