



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
[TV] / MENU	MENU
→ [EXIT]	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
[FUNCTION]	[SOURCE]
DSP / EQ	-/--
DISC MENU	[DISC]
GIGA	[GIGA]
[TOOLS]	[TOOLS]
TITLE MENU	[TITLE]
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP RPEV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
[OK]	OK
[RETURN]	BACK
SLEEP	SLEEP
MO / ST	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
TUNER MEMORY	EPG
AUDIO UPSCALE / P. BASS	FAV
EJECT	[UP] / NET TV
PAUSE	[PAUSE]
STOP	[STOP] / SMART
USB REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
DIMMER	SHIFT+ [DISC]
PL II	SHIFT+ [GIGA]
S/W LEVEL	SHIFT+ [TOOLS]
S. VOL.	SHIFT+ [TITLE]
TUNING / CH+	SHIFT+ P+
TUNING / CH -	SHIFT+ P -
REPEAT	SHIFT+BACK
RED / A	SHIFT+RED
GREEN / B	SHIFT+GREEN
YELLOW / C	SHIFT+YELLOW
BLUE / D	SHIFT+BLUE

