



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
/ MENU	MENU
CANCEL	EXIT
1 / RDS DISPLAY	1
2	2
3 / TA	3
4 / PTY -	4
5 / PTY SEARCH	5
6 / PTY+	6
7/8/9/0	7/8/9/0
MO/ST / SLOW	-/--
DSP / EQ.	
ZOOM	
SLIDE MODE	
SUB TITLE	
VOLUME -/+	VOL -/+
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
/ ENTER	OK
/ RETURN	BACK

ORIGINAL	SUPERIOR
SLEEP	SLEEP
INFO	INFO
DOLBY PLII EFFECT	EPG
DOLBY PLII MODE	FAV
OPEN/CLOSE	/ NET TV
REMAIN	/ SMART TUBE
STOP	/ SMART VIDEO
REW	GREEN
PLAY/PAUSE	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
DVD	SHIFT+1
TUNER/BAND	SHIFT+2
AUX	SHIFT+3
P. SCAN/TUNER MEM.	SHIFT+ -/--
LOGO	SHIFT+
SOUND EDIT	SHIFT+
NTSC/PAL / EZ. VIEW	SHIFT+
TEST TONE	SHIFT+
TUNING/CH. DOWN	SHIFT+DOWN
TUNING/CH. UP	SHIFT+UP
REPEAT	SHIFT+BACK
STEP	SHIFT+SLEEP
DIMMER / TV/VIDEO	SHIFT+INFO
DIGEST	SHIFT+EPG

