



ORIGINAL	SUPERIOR
	POWER
	MUTE
DISC MENU	MENU
	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
FUNCTION	/ SOURCE
DIMMER	-/--
/ HOME	
AUDIO UPSCALE	
/ TOOLS	
TITLE MENU	
VOL+	VOL+
VOL -	VOL -
TUNING+	P+
TUNING -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
	OK
/ RETURN	BACK
V – SOUND	SLEEP
DSP / EQ	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
TUNER MEMORY	EPG
S. VOL	FAV
RED / A / P. BASS	RED
GREEN / B / SW LEVEL	GREEN
YELLOW / C / GIGA	YELLOW
BLUE / D / MO/ST	BLUE
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
REPEAT	SHIFT+BACK
EJECT	SHIFT+
PAUSE	SHIFT+
STOP	SHIFT+
USB REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

