



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
DISC MENU	MENU
/ EXIT	EXIT
1 / RDS DISPLAY	1
2	2
3 / TA	3
4 / PTY -	4
5 / PTY SEARCH	5
6 / PTY+	6
7/8/9/0	6/7/8/9/0
/ FUNCTION	/ SOURCE
/ TV SOUND	-/--
/ HOME	
DSP / EQ	
/ TOOLS	
SUBTITLE	
VOLUME+	VOL+
VOLUME -	VOL -
TUNING UP	P+
TUNING DOWN	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT

ORIGINAL	SUPERIOR
	OK
/ RETURN	BACK
INFO	INFO
RED / A	RED
GREEN / B	GREEN
YELLOW / C / TUN. MEM.	YELLOW
BLUE / D / MO/ST	BLUE
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
REPEAT	SHIFT+BACK
TITLE MENU / POPUP	SHIFT+INFO
EJECT	SHIFT+
PAUSE	SHIFT+
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

