



| ORIGINAL     | SUPERIOR  |
|--------------|-----------|
| POWER        | POWER     |
| MUTE         | MUTE      |
| MENU         | MENU      |
| EXIT         | EXIT      |
| 1/2/3/4/5    | 1/2/3/4/5 |
| 6/7/8/9/0    | 6/7/8/9/0 |
| VIDEO SOUND  | / SOURCE  |
| SD/HD        | -/--      |
| LOGO         |           |
| P. BASS      |           |
| CD RIPPING   |           |
| SOUND EDIT   |           |
| VOL+         | VOL+      |
| VOL -        | VOL -     |
| TUNING/CH+   | P+        |
| TUNING/CH -  | P -       |
| UP           | UP        |
| DOWN         | DOWN      |
| LEFT         | LEFT      |
| RIGHT        | RIGHT     |
| ENTER        | OK        |
| RETURN       | BACK      |
| SLEEP        | SLEEP     |
| TUNER MANUAL | TV/DTV    |
| INFO         | INFO      |

| ORIGINAL     | SUPERIOR    |
|--------------|-------------|
| TUNER MEMORY | EPG         |
| TUNER PRESET | FAV         |
| EJECT        | / NET TV    |
| PAUSE        |             |
| STOP         | / SMART     |
| REW          | GREEN       |
| PLAY         | YELLOW      |
| FWD          | BLUE        |
| AUDIO        | SHIFT+MUTE  |
| CANCEL       | SHIFT+EXIT  |
| AUX          | SHIFT+1     |
| DVD          | SHIFT+2     |
| PORT         | SHIFT+3     |
| TUNER        | SHIFT+4     |
| MO/ST        | SHIFT+ -/-- |
| ZOOM         | SHIFT+      |
| SUBTITLE     | SHIFT+      |
| SLOW         | SHIFT+LEFT  |
| SKIP NEXT    | SHIFT+ P+   |
| SKIP PREV    | SHIFT+ P -  |
| REPEAT       | SHIFT+BACK  |
| STEP         | SHIFT+SLEEP |
| DIMMER       | SHIFT+INFO  |
| REMAIN       | SHIFT+      |
|              |             |

